

## INSTALLATION MANUAL

# Z-UMTS HW2

Datalogger HSPA + with built-in I/O, telecontrol functions, embedded UPS, GPS, and advanced programming language

EN



 **SENECA**



SENECA s.r.l.


Headquarters: Via Austria, 26 – 35127 – PADOVA – ITALY

Phone +39.049.8705355 - 8705359 - Fax +39.049.8706287

Manuals and configuration software are available at website: [www.seneca.it/products/z-umts](http://www.seneca.it/products/z-umts)

This document is property of SENECA Srl. Duplication and reproduction are forbidden, if not authorized. Contents of the present documentation refers to products and technologies described in it. This informations may be modified or integrated for technical and / or commercial requirements.

## MODULE LAYOUT

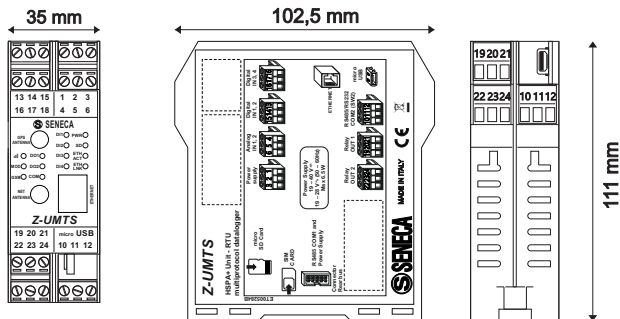

<b>Dimensions (L×H×W)</b>	35 x 102,5 x 111 mm
<b>Weight</b>	220 g.
<b>Case</b>	Material PA6, black color.

## LED SIGNALING ON FRONT PANEL


LED	Status	LED's meaning
GSM LEVEL [Signal Strength Icon] (Green)	ON ■	GSM level 4 ■■■■■■ (maximum signal)
	Blinking 0,3s ON ■ 0,3s OFF □	GSM level 3 □■■■ 3 Flashes (good)
		GSM level 2 □□■ 2 Flashes (medium)
		GSM level 1 □■ 1 Flash (low)
	OFF □	GSM level 0 □□□□□□ (no signal detected)
MOD (Yellow)	ON ■	Registered in 3G network
	OFF □	Others
GSM STATUS (Yellow)	Slow Blinking 0,2s ON ■ 1,8s OFF □	■■□□□□□□ (200ms High/1800ms Low) Network searching
	Slow Blinking 1,8s ON ■ 0,2s OFF □	■■■■■■■■□ (1800ms High/200ms Low) Idle
	Fast Blinking 0,125s ON ■ 0,125s OFF □	■■□□□□□□□□□□ (125ms High/125ms Low) Data transfer is ongoing
	ON ■	Voice calling



## LED SIGNALING ON FRONT PANEL

LED	Status	LED's meaning
SD (Red)	ON	SD card mounted in the right way
	Medium Blinking 0.8 sec ON 0.8 sec OFF	■■■■□□□□■■■■□□□□ SD card activity
	Fast Blinking 0.2 sec ON 0.2 sec OFF	■□■□■□■□■□■□■□■□ SD card error
	OFF	SD card not present
ETH LNK (Green)	Blinking	RJ45 connection activated
ETH ACT (Yellow)	Blinking	Traffic on Ethernet port

## TECHNICAL SPECIFICATIONS
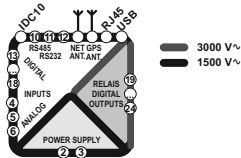
<b>STANDARDS</b>	<p><b>EN61000-6-4</b> Electromagnetic emission, industrial environment.</p> <p><b>EN61000-6-2</b> Electromagnetic immunity, industrial environment.</p> <p><b>EN301 511</b> Harmonized standard for mobile stations.</p> <p><b>EN301 489-1</b> ElectroMagnetic Compatibility for radio equipment.</p> <p><b>EN301 489-7</b> Specific (EMC) conditions for mobile radio equipment.</p> <p><b>EN60950</b> Safety of information Technology Equipment.</p>
<b>INSULATION</b>	 <p>3000 V~ 1500 V~</p>
<b>ENVIRONMENTAL CONDITIONS</b>	
<i>Temperature</i>	-10 – + 50°C / (-10 – + 40°C with internal UPS use).
<i>Humidity</i>	30% – 90% not condensing.
<i>Storage temperature</i>	-20 – + 65°C / (-20 – + 45°C < 6 months with internal UPS use).
<i>Protection rating</i>	IP20.
<b>MOUNTING</b>	35mm IEC EN60715 DIN Rail.
<b>INTERNAL UPS</b>	Backup rechargeable batteries. Duration: up to 1 hour.
<b>CONNECTIONS</b>	Removable three pole screw terminal pitch 5mm, for cable up to 2.5 mm <sup>2</sup> , rear IDC10 connector, front RJ45 socket, side Micro USB socket and 2 SMA connectors for GSM antenna and GPS antenna.

## TECHNICAL SPECIFICATIONS

<b>POWERSUPPLY</b> <i>Voltage</i> <i>Power absorbed</i>	19 – 40 V $\overline{\text{=}}$ or 19 – 28 V $\sim$ 50 – 60 Hz. < 6.5W.
<b>DIGITAL INPUTS</b>	Number of channels 4. PNP or NPN configurable. Input voltage OFF<4V ON>8V (Max. 24V $\overline{\text{=}}$ ). Max. frequency 30Hz. Absorbed Current 3mA at 12V $\overline{\text{=}}$ 10mA at 24V $\overline{\text{=}}$ .
<b>TOTALIZERS</b>	Four 32 bit totalizers on non-volatile memory.
<b>COUNTERS</b>	Four 32 bit resettable counters on non-volatile memory.
<b>DIGITAL OUTPUTS</b>	Number of channels 2. SPDT Relays with free contacts. Max. Voltage 250V $\sim$ . Max. Current 2A.
<b>ANALOG INPUTS</b>	Number of channels 2. mA $\overline{\text{=}}$ or V $\overline{\text{=}}$ configurable. Voltage input 0 – 30V. accuracy 0.1% of the Full Scale. Current input 0 – 20mA accuracy 0.1% of the Full Scale. Inputs protection 40V / 25mA. Resolution 16 bit.
<b>COMMUNICATION PORTS</b>	RS485 COM1 port on rear IDC10 connector, RS485 or RS232 COM2 port on M10-M11-M12 screw terminals,. Ethernet 10/100 baseT with autoswitch on RJ45 frontal socket and USB on MicroUSB side socket.
<b>MODEM 3G+ WORLD WIDE PENTABAND</b>	GSM / GPRS / EDGE / WCDMA / HSDPA / HSUPA / HSPA+ / DC-HSPA.
<b>SUPPORTED SYSTEM PROTOCOLS</b>	FTP client, SMTP client, http rest (SSL), MQTT (SSL), ModBUS TCP server, ModBUS TCP client, ModBUS RTU master, ModBUS RTU slave, For more information, please refer to the <b>User Manual</b> .
<b>GNSS</b>	8 <sup>th</sup> generation: 16GPS channels, 14 GLONASS channels, Accuracy <1,5m CEP-50.
<b>STORAGE UNIT</b>	microSD and microSDHC Max. 32GB.
<b>PROCESSOR</b>	ARM 32bit
<b>OPERATING SYSTEM</b>	Real Time Multitasking
<b>CHARACTERISTICS</b>	Embedded Webserver and microSD Webserver


## MODULE SHUT DOWN PROCEDURE

The module has an internal UPS that allows it to remain turned ON even without external power supply. To turn off the module, first of all, remove the external power supply and then press the button PS1 on the right side of the module for at least 10 seconds. When you release the button the PWR LED turns OFF in order to signal that the module is switched off.

## PRELIMINARY WARNINGS



**WARNING:** Before performing any operation is mandatory to read the full contents of this manual. The module may only be used by qualified and skilled technicians in the field of electric installation. Specific documentation is available for download at website: [www.seneca.it/products/z-umts](http://www.seneca.it/products/z-umts).

The symbol  with the word **WARNING** identifies conditions and actions that pose hazard(s) to the user. The symbol  with the word **CAUTION** identifies conditions and actions that may damage the device or the equipments connected.

No warranty is guaranteed in connection with faults resulting from improper use, from modifications or repairs carried out by Manufacturer-unauthorized personnel on the device, or if the content of this user Manual is not followed.



Only the Manufacturer is authorized to repair the module or to replace damaged parts. The product is susceptible to electrostatic discharge, take appropriate countermeasures during any operation.




**CAUTION:** It is forbidden to place anything that could obstruct the ventilation slits. It is forbidden to install the module near heat sources.




Disposal of electrical & electronic equipment (applicable throughout the EU and other countries with separate collection programs). The symbol found on this product or on its packaging, indicates that this product it must be handed over to an applicable collection point for the recycling of electrical and electronic equipments.

## INSTALLATION ON AND REMOVAL FROM IEC EN 60715 DIN RAIL

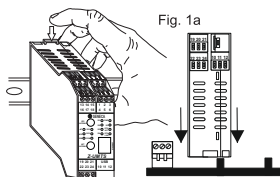

### Insertion on the IEC EN 60715 DIN rail:

- 1) Move the two hooks on the back of the module outwards as illustrated in fig. 1b.
- 2) Insert the module rear IDC10 connector into a free slot of DIN rail accessory as you can see in fig 1a. (the insertion is one way only because the connectors are polarized).
- 3) To secure the module to the IEC EN 60715 DIN rail, tighten the two hooks on the side of the IDC10 rear connector as shown in fig. 1a.

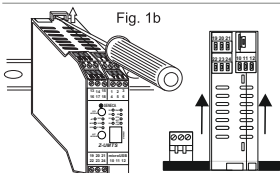

### Removal from IEC EN 60715 DIN rail:

As shown in fig. 1b:

- 1) Move outwards the two hooks on the side of the module, with the help of a screwdriver.
- 2) Extract the module from the IEC EN 60715 DIN rail.

## USE OF Z-PC-DINAL ACCESSORY

Don't turn upside down the module and don't force the insertion of the IDC10 connector into the Z-PC-DIN bus. The IDC10 connector located on the rear of the module will be inserted on a free slot of Z-PC-DIN accessory. In the figure you can see the meaning of the various pins of the rear IDC10 connector if you want to provide the signals directly through this connector. The pictures Fig. 1 c and Fig.1 d show how to connect powersupply and RS485 COM1 port to the rear IDC10 connector.

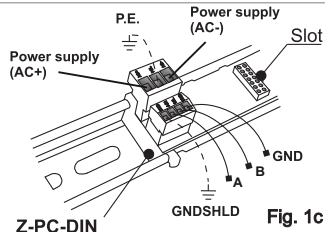


Fig. 1c

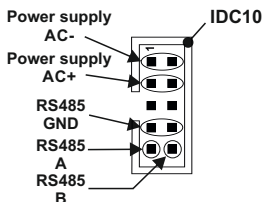


Fig. 1d

## ELECTRICAL CONNECTIONS




**CAUTION:** When you turn On the module for the first time, the device must be supplied without any interruptions for at least 72 hours in order to charge the internal batteries  
**Power off the module, with the PS1 button, before connecting the inputs and outputs.**

In order to satisfy the electromagnetic compliance requirements:

- Use shielded cables for the signals transmission.
- Connect the shield to a preferential ground for devices.
- Space the shielded cables from other cables used for power installations.  
 (transformers, inverters, motors, induction ovens, etc...).

### • POWERSUPPLY

19 – 28V~ 50 – 60 Hz  
 19 – 40V= 6.5W



+12V= at 40 mA

The power supply must be connected to terminals 2 and 3.

The supply voltage must be between:

19 and 40V= (any polarity), or between 19 and 28 V~.

**The upper limits must not be exceeded in order to avoid serious damage to the module.** The power supply source must be protected from any malfunctions of the module through appropriately sized safety fuse.




### • TWO ANALOG INPUTS

Voltage

Current active sensor (4 wires)

Current passive sensor (2 wires)

The module has two software voltage or current configurable analog inputs. For the configuration software you can read the user manual.




(\* Not available without external powersupply


## ELECTRICAL CONNECTIONS

### • FOUR DIGITAL INPUTS


Internal power supply NPN

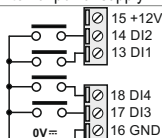


Internal power supply PNP

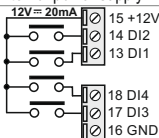

External power supply PNP


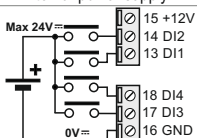


### • TWO DIGITAL OUTPUTS




The module has two **digital outputs with free contacts**. The figures show the internal relay contacts available.

### • COM2 SERIAL PORT




The module has a serial port available to terminals 10-11-12. You can configure this port through SW2 switch.

## SIM-CARD AND SD-CARD INSERTING



Inserting the SIM card into the rear slot on the side of IDC10 connector.



Inserting the MicroSD or the microSHDC, into the side slot. Max 32 GB. Push-push connector for insertion and removal.

## CONFIGURATIONS

### DIP-SWITCHES

**SW1**

All the DIP-Switches to **OFF** ↓ position.  
For further informations please refer to: **USER MANUAL**

**SW2**

RS232 or RS485 configuration  
on terminals 10-11-12 (serial port COM 2)


**RS232**

**ON**



**RS485**

**OFF**

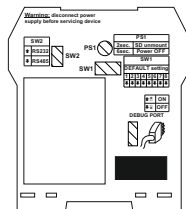

## CONTACTS

Technical support

support@seneca.it

Product Informations

sales@seneca.it